

Erratum

There is error in this instruction manual. Please refer to below errata.

- | | | | | | |
|----|----------|---------|-------------------------------------|--------------------------|-----------------|
| 1. | Page11-1 | error | Emission : First environment | (Domestic environment) | ;22kW or less |
| | | | Second environment | (Industrial environment) | ;30kW or more |
| | | | | ↓ | |
| | | correct | Emission : First environment | (Domestic environment) | ;15kW or less |
| | | | Second environment | (Industrial environment) | ;18.5kW or more |

INR-SI47-0651-E

Erratum

There is error in this instruction manual. Please refer to below errata.

- | | | | | | |
|----|----------|---------|-------------------------------------|--------------------------|-----------------|
| 1. | Page11-1 | error | Emission : First environment | (Domestic environment) | ;22kW or less |
| | | | Second environment | (Industrial environment) | ;30kW or more |
| | | | | ↓ | |
| | | correct | Emission : First environment | (Domestic environment) | ;15kW or less |
| | | | Second environment | (Industrial environment) | ;18.5kW or more |

INR-SI47-0651-E